




3:1 CONNECTION TO THE CENTRAL HEATING

To connect the Alde Flow into your Alde central heating, refer to "Plumbing Diagram - Central Heating". Make sure you have the ability to bleed the system of air.

NB: Pay close attention to the direction of the non-return valves.

IMPORTANT!
All non-return valves must be fitted in the correct direction.

Plumbing Diagram - Central Heating

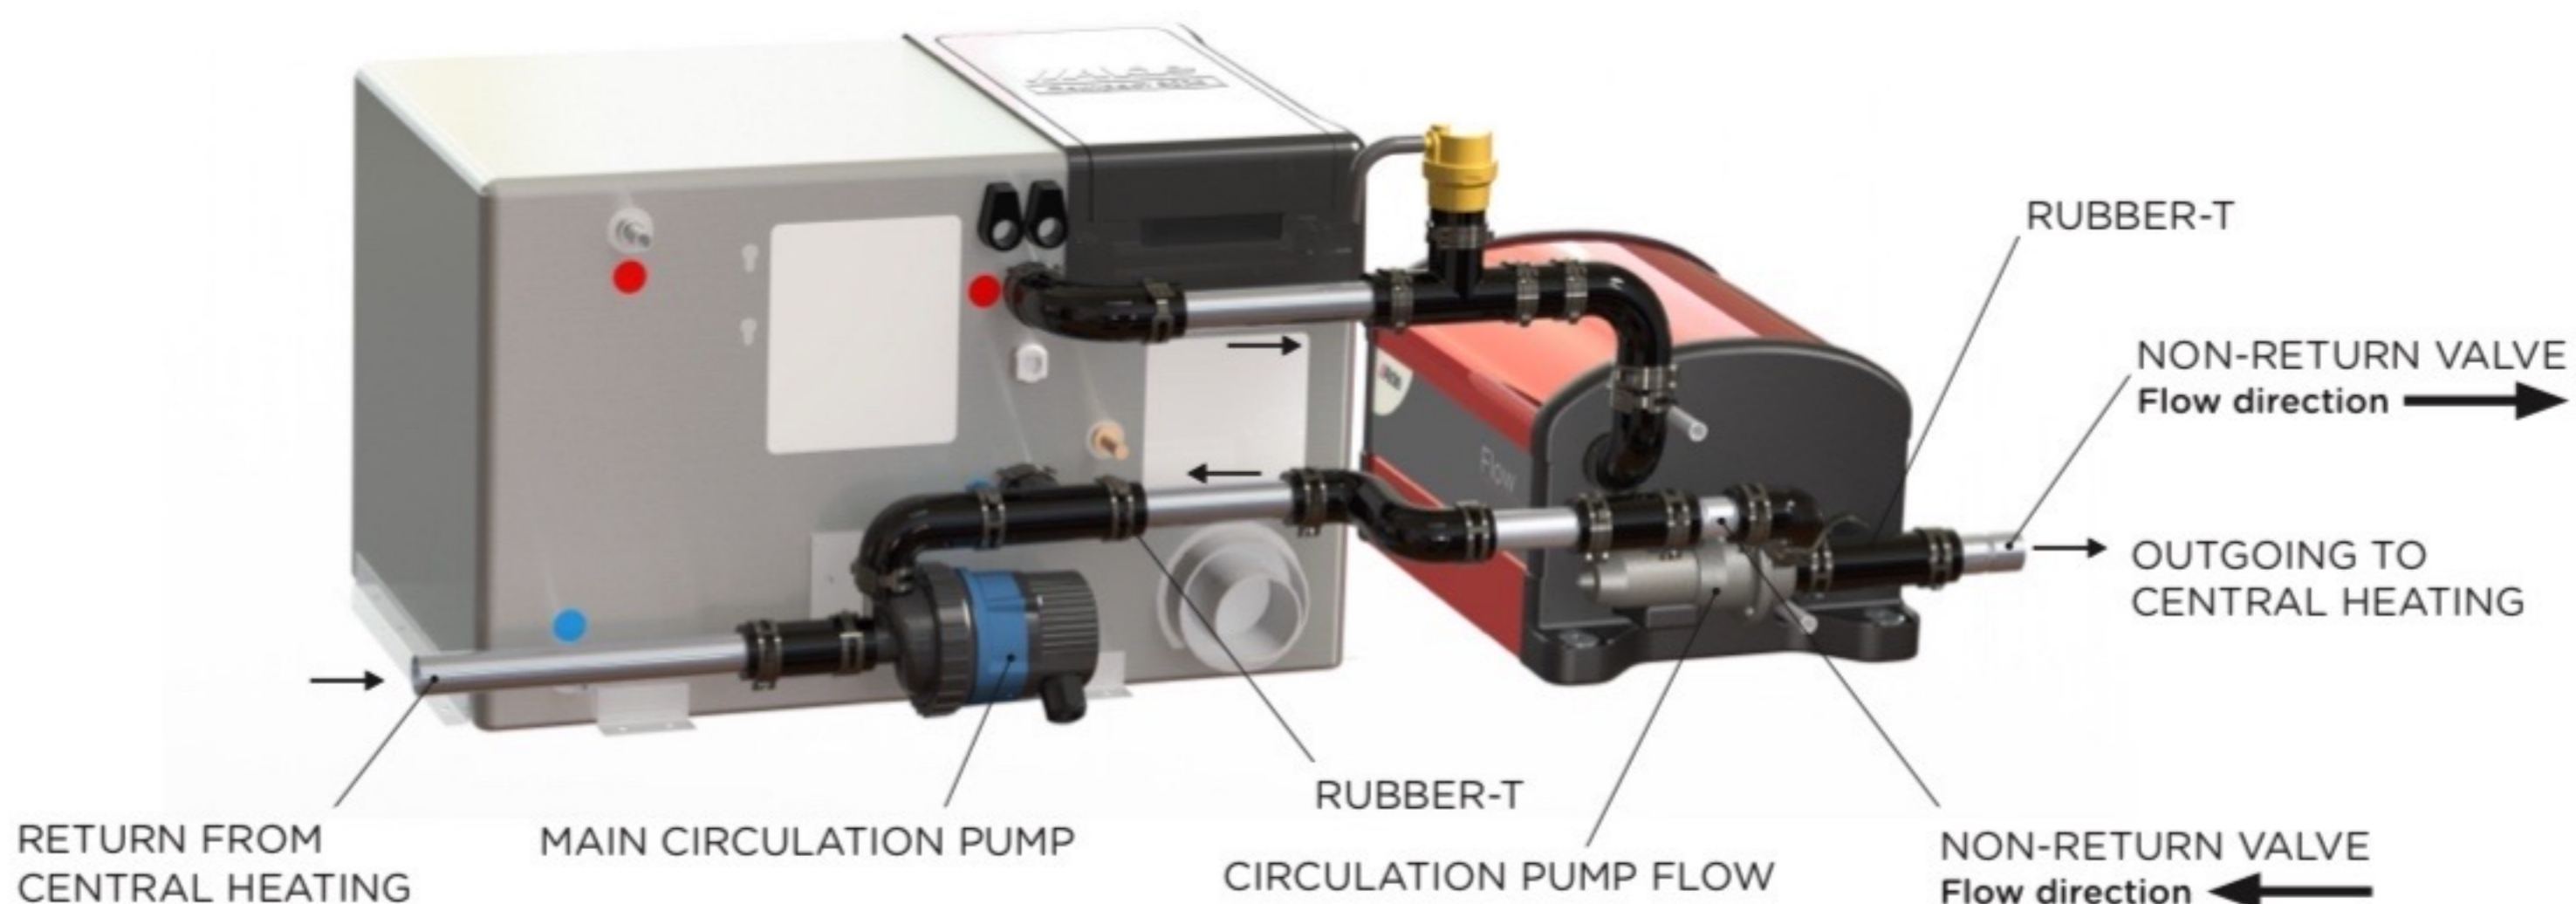

3:2 CONNECTION TO THE HOT WATER

To connect the Alde Flow into your hot water, refer to "Plumbing Diagram - Hot Water".

WARNING!
The safety/drain valves for the hot water must be located in the correct positions, according to the diagram. This is to allow the fresh water to be drained.

IMPORTANT!
An accumulator tank shall be installed immediately prior to Alde Flow to level the pressure. The accumulator tank shall be approved for at least 5 bar.

Plumbing Diagram - Hot Water

