

T@B 320 Front Window Seal

With spring right around the corner, it's time get your trailer ready for camping. You will want to be sure to check all the caulking to ensure that there are no cracks or gaps where water could get in. One place to check is along the top of the front window - where snow sits on the top of the hinge. When snow melts and freezes, water can work its way under the hinge. Also, check the window seal at the top corners because they can get pushed down with snow and ice. We recommend removing the window and tightening the screws that may have been worked loose. Finally, caulk along the top of the hinge, top of the seal and down the sides about 4 inches.

1. Remove front window.

- a. Remove two screws that secure the struts.
- b. Remove screw in hinge.
- c. Put masking tape on the roof to protect it while Sliding window out of hinge.



2. Tighten screws in hinge.

- a. Clean any butyl tape that squeezed out from under the hinge and caulk along the top of hinge.

3. Check the top corners of the seal to insure it is properly sealed.

- a. After insuring that the seal is good, apply caulking along the top of seal and down 4" and reinstall window.

