



# Instruction Sheet


## PC600 Post Purge Timer Plug-In PowerPort Card

102-094

SUPERSEDES: August 1, 1997

EFFECTIVE: May 1, 2000

Plant ID No. 9300-867

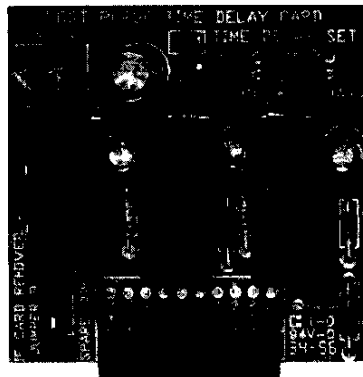

### Operation:

Once the priority zone is satisfied, the PC600 maintains power to the circulator, but does not fire the boiler. The circulator purges excess heat into the priority zone, minimizing standby loss during warm weather months and optimizing boiler operation when used with a boiler reset control. Power can be maintained to the circulator from a minimum of 10 seconds to a maximum of 420 seconds. The power LED light is energized when the priority zone or the post purge card is in operation.

### Installation:

The PC600 can be installed in any one of the PowerPort terminals located on the Taco Expandable (-EXP) Control(s). Remove the shunt/jumper between pins 9 & 10 on the PowerPort terminal before installing the PC600. Align the connector on the base of the post purge card with the PowerPort terminal on the Expandable Control and push until the two mate.

### XX Terminals (Optional):

The XX terminals on the post purge card can be wired to TT on the boiler to fire only when the priority zone is calling for heat. If using a boiler with an internal reset control, wire the XX terminals in parallel with the TT connections of the internal reset control.

## Do it Once. Do it Right.

TACO, INC., 1160 Cranston Street, Cranston, RI 02920 Telephone: (401) 942-8000 FAX: (401) 942-2360.

TACO (Canada), Ltd., 6180 Ordan Drive, Mississauga, Ontario L5T 2B3. Telephone: 905/564-9422. FAX: 905/564-9436.

Visit our web site at: <http://www.taco-hvac.com>

Printed in USA

Copyright 2000

TACO, Inc.