



- NOTES:**
- 1) See unit data label for recommended supply wire sizes.
  - 2) Thermostat anticipator setting: 0.75 Amps.
  - 3) To change blower speed on units without a relay box refer to installation instructions.
  - 4) Refer to furnace and/or relay box installation for thermostat connections.
  - 5) If any wire in this unit is to be replaced it must be replaced with 105°C thermoplastic copper wire of the same gauge.

**! WARNING:**  
 Switch circuit breakers to the OFF position before servicing the furnace.

- 6) Not suitable for use on systems exceeding 120V to ground.
- 7) This wire is used with some accessories. See accessory installation instructions for further details.

Figure 30. E2EB 020, 023, and 023 - 5 Ton Wiring Diagrams