

Control Amplifier Hookups

Connect the front, rear, center, and woofer pre out jacks on your control amplifier (Sony TA-E9000ES etc.) to the pre amplifier's BYPASS 5.1ch input jacks. For details, see the operating instructions supplied with your control amplifier.

To prevent damage to your speakers, do not connect components whose volume cannot be controlled to the BYPASS 5.1ch or BYPASS 2ch jacks. Audio signals input to the BYPASS 5.1ch or BYPASS 2ch jacks are not routed through this unit's MASTER VOLUME control. They are output at the same level they were input.

Required cords

Audio cords (not supplied)

When connecting a cord, be sure to match the color-coded pins to the appropriate jacks on the components.



Monaural audio cords (not supplied)

For the BYPASS 5.1ch CENTER and BYPASS 5.1ch WOOFER jacks.



⚡ When making woofer and center channel connections
 You can use one set of pins (e.g., red) on the audio cord (not supplied) to connect the CENTER jacks and the other set (e.g., white) to connect the WOOFER jacks.

