


acer

eKinekt Bike Desk

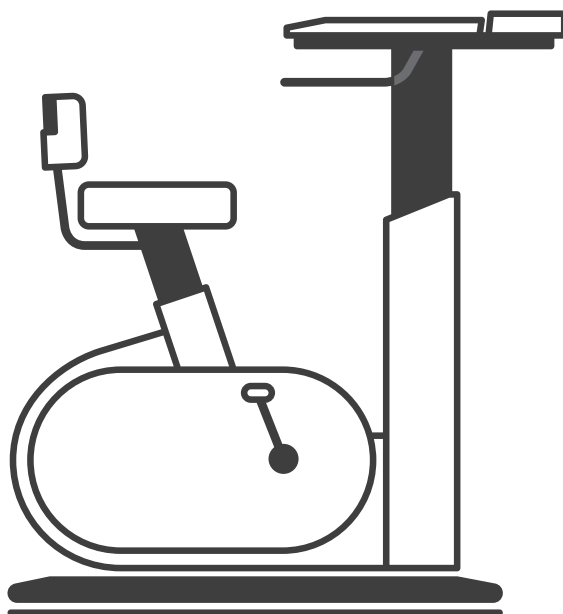

User's manual

Table of Content

Safe to Use 2

Product Breakdown Diagram..... 3

Package Removal 4

Assembly Instructions..... 6

Operation Instructions..... 17

Display Navigation 18

Safety Notice 20


Battery information 20

When using the eKinekt Bike Desk, one should always follow basic precautions, including:

- Never drop or insert anything into any openings. If items fall, remove them carefully or call customer service.
- Do not use the eKinekt Bike Desk if it is damaged or partially submerged in water.
- Do not use outdoors or in areas with high humidity or extreme temperatures.
- Do not use the eKinekt Bike Desk in places with aerosol spray atmosphere or oxygen delivery.
- Clean only with mild detergent and a damp cloth. Do not use solvents. However, areas around the screen, buttons, and charging ports must be cleaned with a dry cloth to prevent water from entering.
- Use the product for the intended use as described in this manual, and do not use accessories not recommended.
- Keep hands away from all moving parts.
- Place the eKinekt Bike Desk on a sturdy, horizontal surface. Do not operate the product on thick plush or shag carpets, which may damage the carpets.
- The product is equipped with Bluetooth and can be used while Bluetooth is off.

Kids & Pets

- Children and pets should stay at least 10 feet (3m) apart while using the product.
- This eKinekt Bike Desk is not intended for children aged 12 and under.
- Children cannot clean and maintain the product without supervision.
- Keep children away from the product. Some areas may cause injuries.

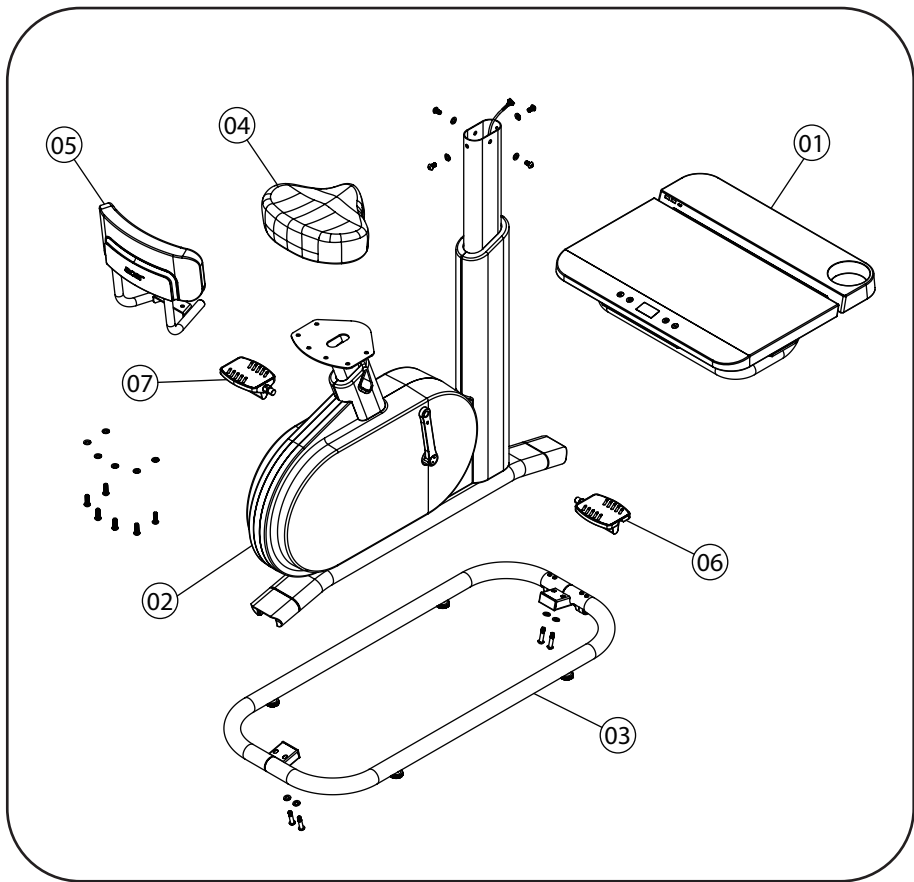


Product Breakdown Diagram

Components


Item#	Part Description
①	Desk
②	Main frame
③	Ground support
④	Cushion
⑤	Backrest
⑥	Right pedal
⑦	Left pedal

Packaging Perspective Views

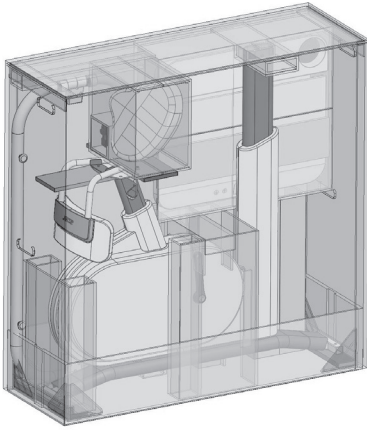


Step:

- A. Remove the top of the carton ①.
- B. Remove the dividers and corner boards ②.
- C. Remove the desk box and the accessory box ③.

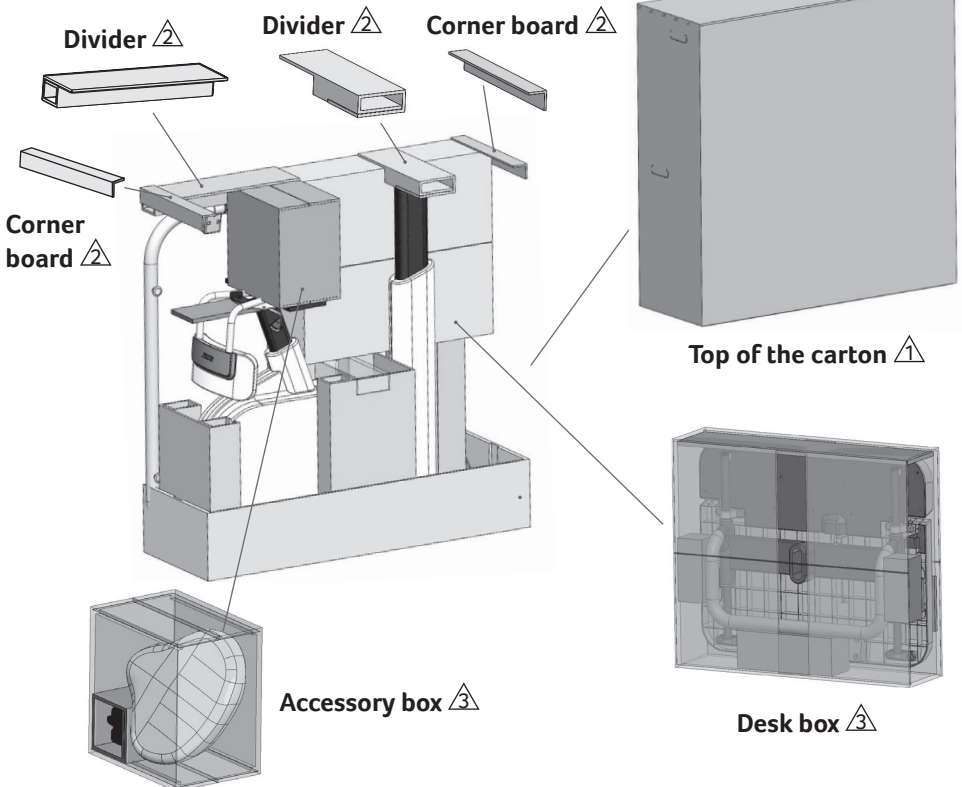


Package Removal

D. Remove the ground support and the divider 4.

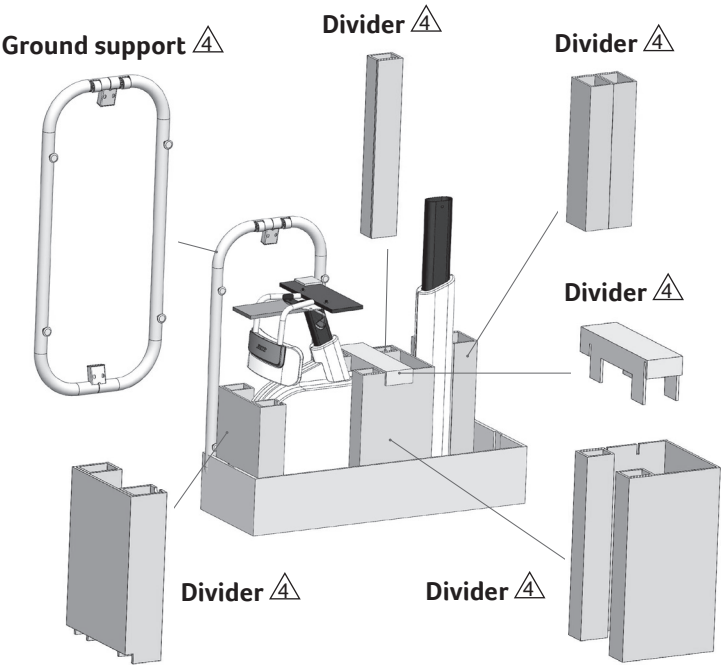

E. Disassemble the bottom of the carton 5.

F. Remove the corner boards 6.

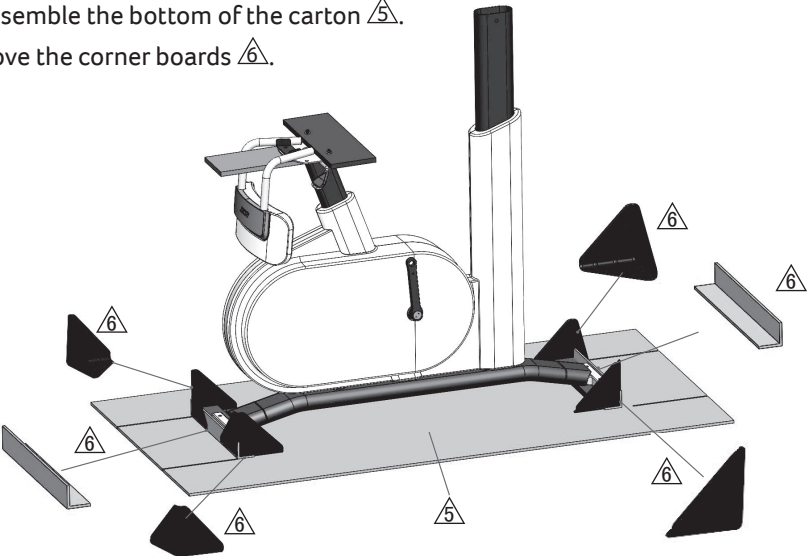


Precautions before assembly:







Correct way of moving:

Two people, each on one side, are required to grasp the metal tube of the bottom frame. Then, remove and sit the machine smoothly in place.

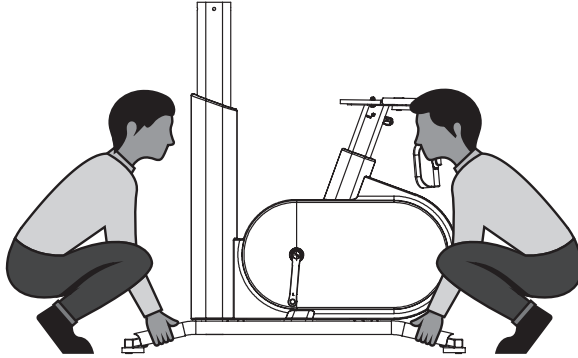

Incorrect way of moving:

The following four scenarios are the incorrect ways of handling.

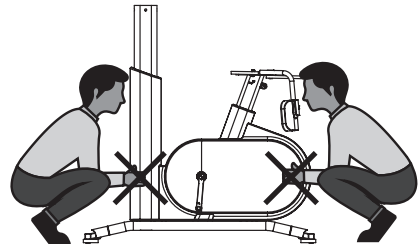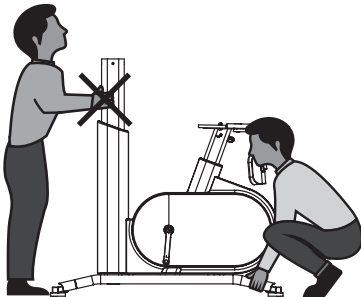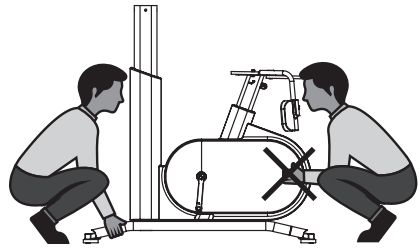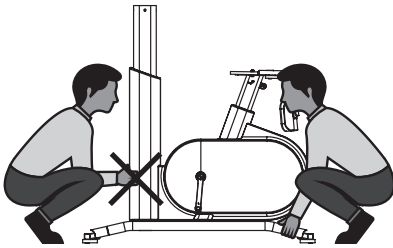


Assembly Instructions


Step 1: Unpack the boxes and verify the parts

A. Disassemble the accessory box and the desk box. Keep the desk box intact for subsequent assembly.

Accessory box: left and right pedals, cushion, and tool kit

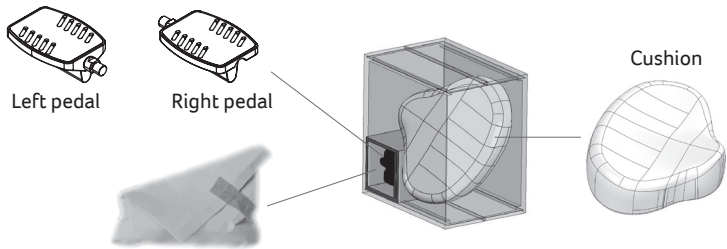


Desk box

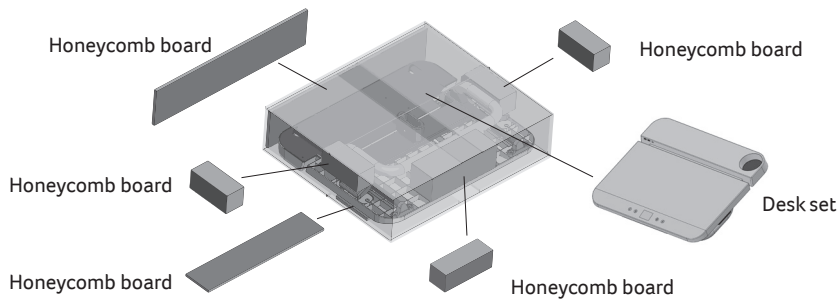

B. Unpack the toolkit.


Toolkit

Item#	Qty.	Hardware Description
⑧	4	M8*15L screws
⑨	4	M8*35L screws
⑩	6	M8*25L screws
⑪	2	M8 curved washers
⑫	12	M8 flat washers
⑬	1	L-shaped hex wrench
⑭	1	Open wrench

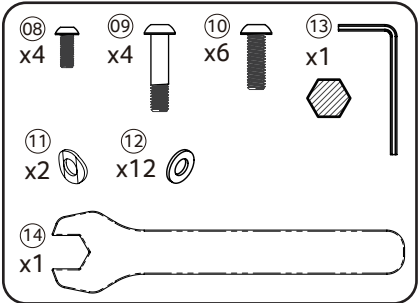

Step 2: Remove the front and rear posts

- A. Lay the desk box on the floor according to the illustrated direction. Place the machine steadily onto the desk box and have one person support the machine.
- B. The other person removes the front and rear posts with ⑬ hex wrench.

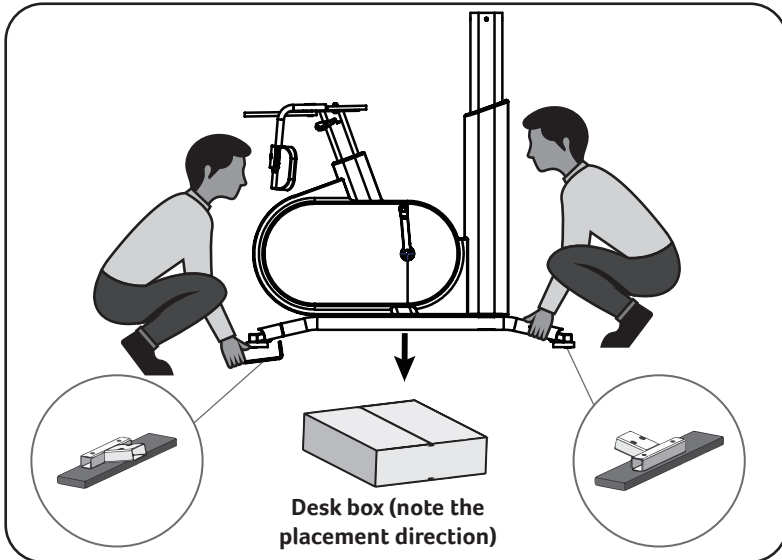


Remove
counterclockwise

⑬



L-shaped
hex wrench
(x1)


- C. When removing the front and rear posts, place it back onto the bottom of the carton. One person should maintain holding to prevent the mainframe from tipping over.

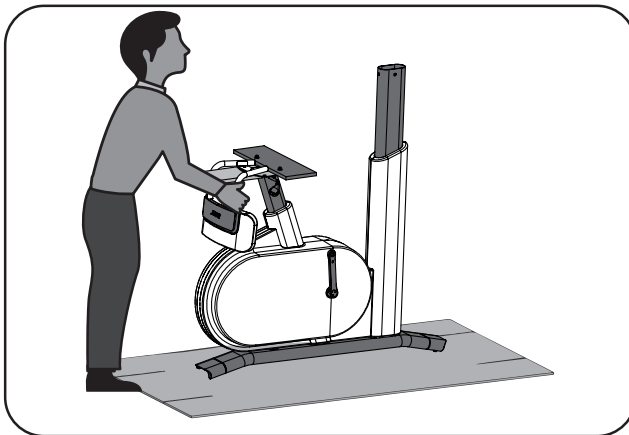


Assembly Instructions

Step 3: Install the ground support

A. Place the ground support on the desk box.




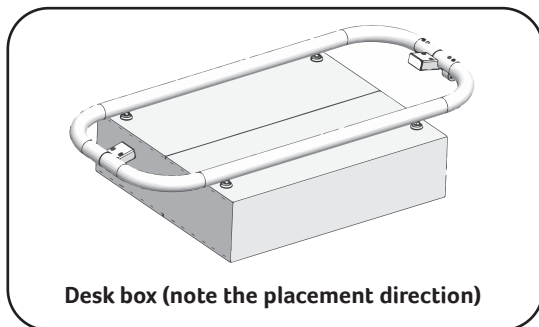


B. Two people place the main frame onto the ground support (note the direction of **Front**) firmly.

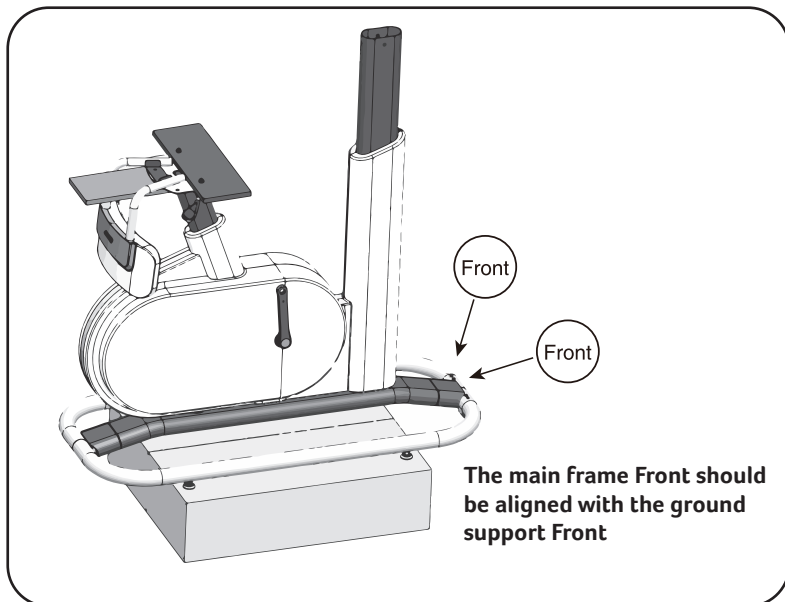




C. Connect Main Frame (02) and Ground Support (03).

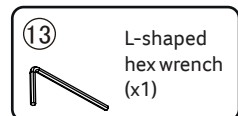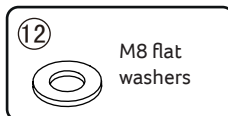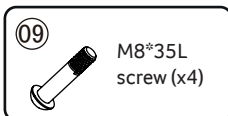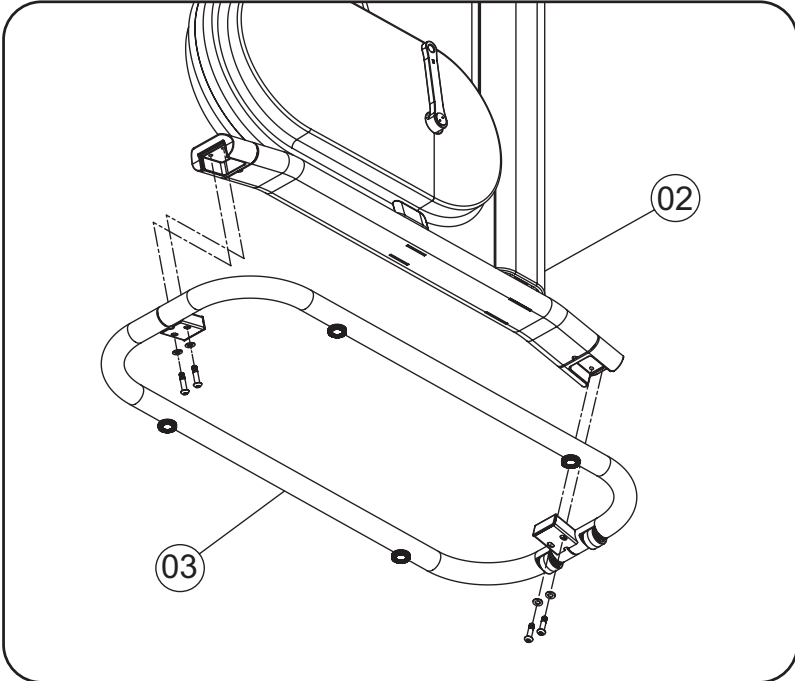
D. Use L-shaped hex wrench (13) to tighten 4x M8*35L screws (09) and M8 flat washers (12). Only tighten when all four screws are in place.









Assembly Instructions

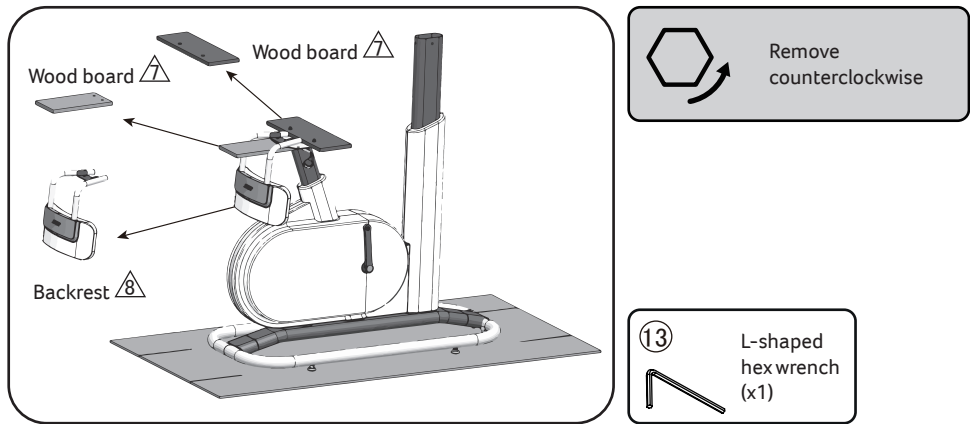
Step 4: Disassemble the seat wood board and backrest

- A. Move the machine back onto the carton bottom.
- B. Remove the wood board  and Backrest  from the seat tube with hex wrench .





 
 
Step 5: Install the cushion

- A. Attach Cushion  to Main Frame .
- B. Use L-shaped hex wrench  to tighten 4x M8*25L screws  with M8 flat washers  . Only tighten when all four screws are in place.

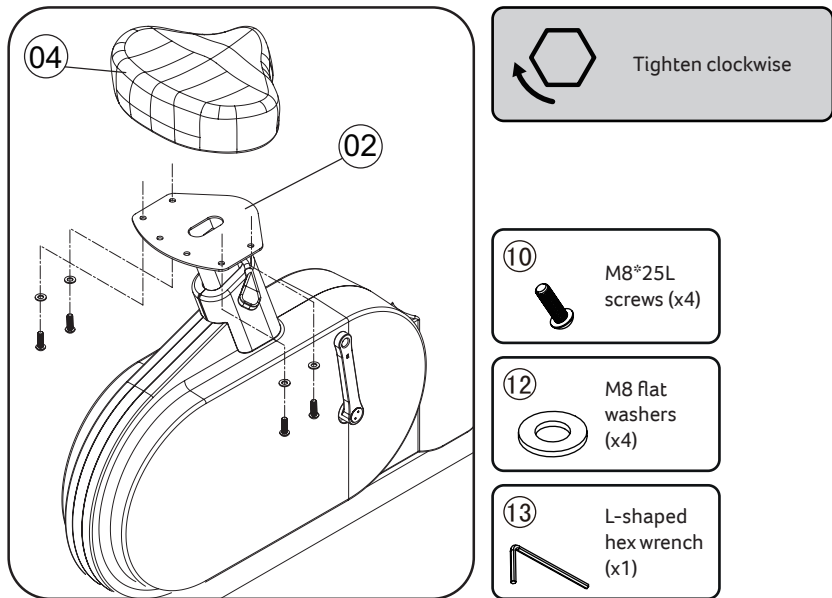

Step 6: Install the backrest


- A. Install Backrest (05) to Main Frame (02).
- B. Use L-shaped hex wrench (13) to tighten 2x M8*25L screws (10) with M8 flat washers (12). Only tighten when all two screws are in place.

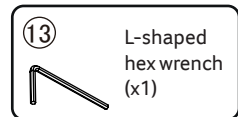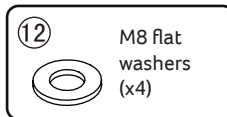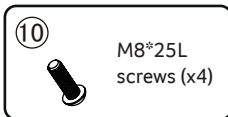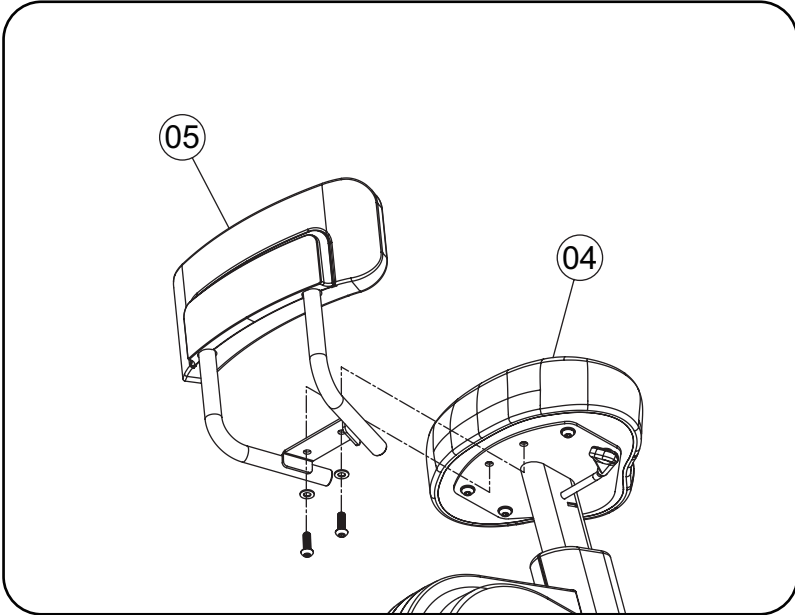

Assembly Instructions

Step 7: Install the left and right pedals

- A. First, identify the left and right pedals. Left Pedal ⑦ is labeled L, and Right Pedal ⑥ is labeled R.
- B. Mount Left Pedal ⑦ to the left crank (L) counterclockwise.
- C. Mount Right Pedal ⑥ to the right crank (R) clockwise.
- D. Use an open wrench to lock the left and right pedals.

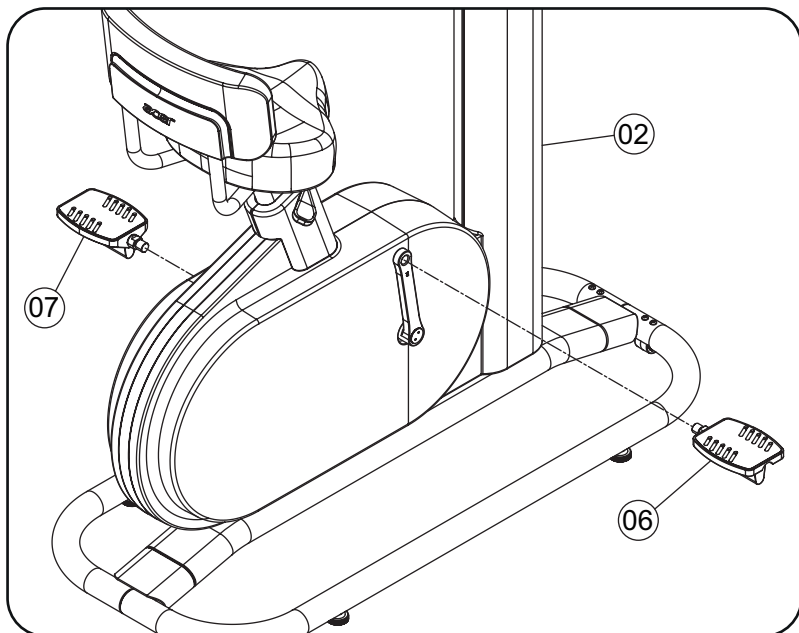

(L) Tighten
counterclockwise



(R) Tighten
clockwise


⑭





Open
wrench (x1)



Step 8: Install the desk

A. Two people are required to assemble the desk.

B.  First, connect the 2-PIN connector of Desk (01) to the 2-PIN connector of Main Frame (02). Then connect the 6-PIN connector of Desk (01) to the 6-PIN connector (A) of Main Frame (02).

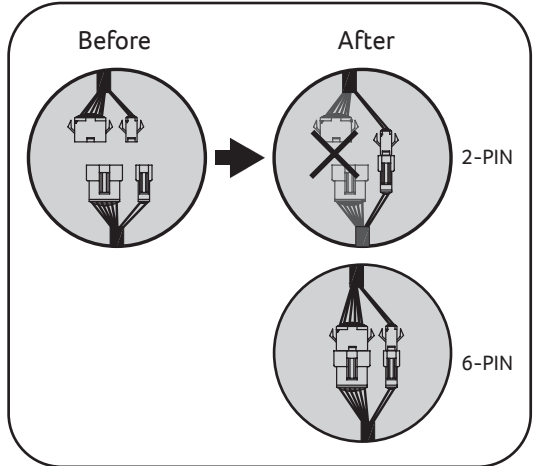
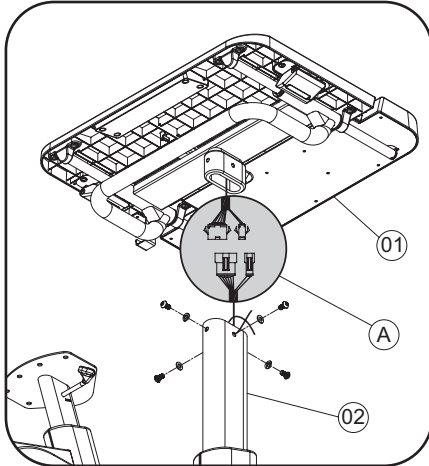


C. Remove Cable Tie (02) on the 6 and 2-PIN connectors.

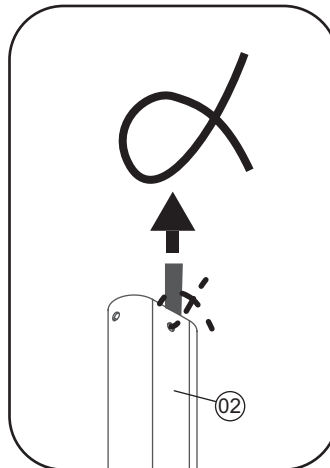
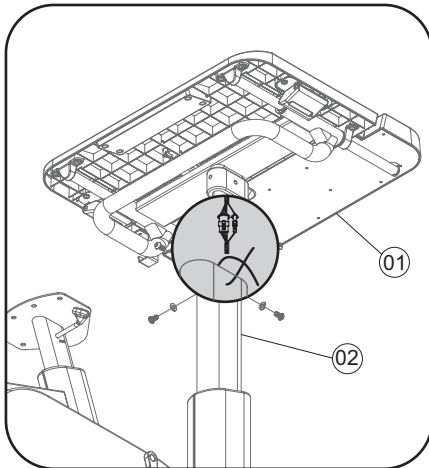




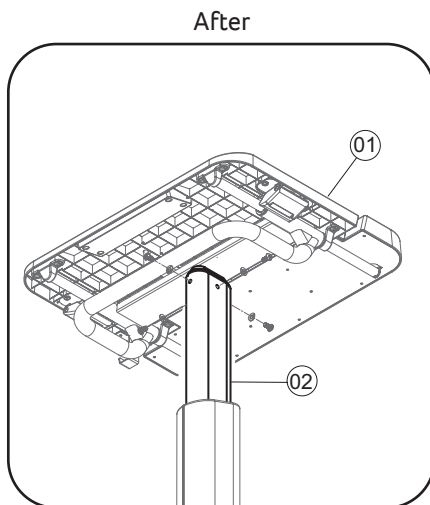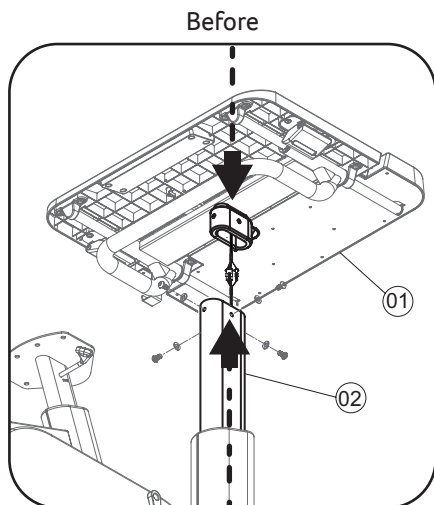

Assembly Instructions

D. Insert the Desk (01) into Main Frame (02).

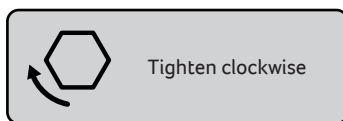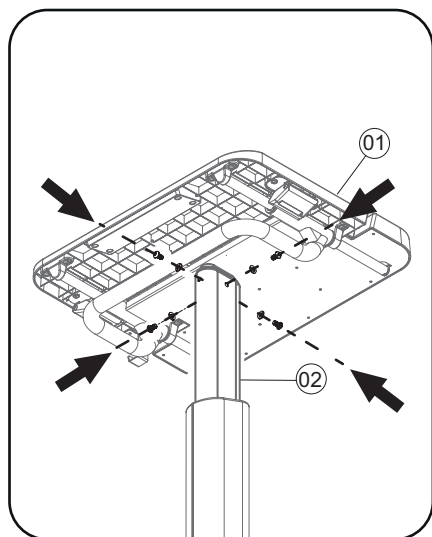

E. Use L-shaped hex wrench (13) to tighten 4x M8*15L screws (08) with M8 flat washers (12) and M8 curved washers (11). Only tighten when all four screws are in place.





 <p>(08) M8*15L screws (x4)</p>	 <p>(12) M8 flat washers (x4)</p>
 <p>(11) M8 curved washers (x2)</p>	 <p>(13) L-shaped hex wrench (x1)</p>

Note:

- M8 flat washers (12) are installed on the left and right flat surfaces.
- M8 curved washers (11) are installed on the front and rear curved surfaces.

Step 9: Calibration

- A. There are four adjustment feet (B) under the ground support. Gently shake the machine back and forth to check if any feet are not in contact with the floor. Turn clockwise with fingers to raise and counterclockwise to lower. Adjust the feet until both the front and rear feet sit on the floor.

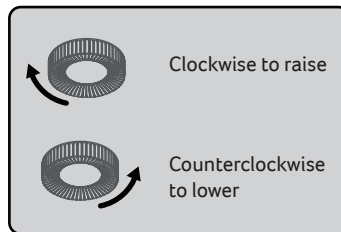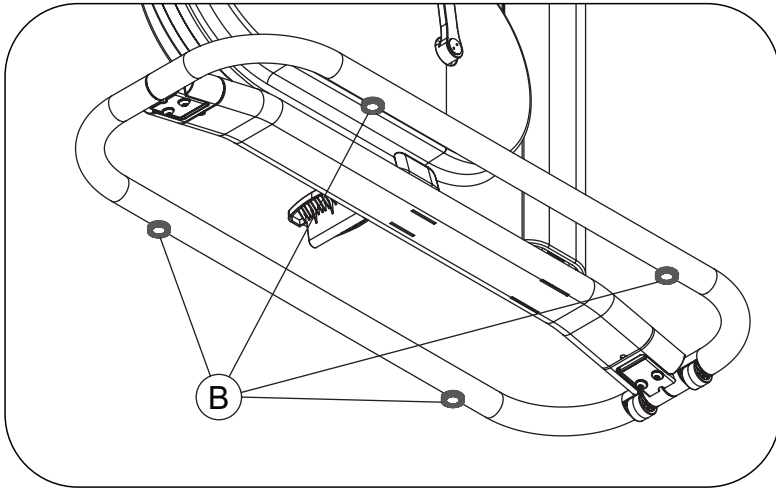


Operation Instructions


eKinect Bike Desk Features & Specifications:

Power	Stampede powering
Battery	For electric control module only
USB Port	2*Type A (5W), 1*Type C (65W)
Stampede resistance	Four-level adustment (Lv1~Lv4)
Seat height	Pneumatic manual adjustment, 78cm~98cm (±2cm)
Desk height	Electrical adjustment 110cm~140cm (±2cm)
Desk front and rear adjustment	Press and hold the front and rear adjustment levers on the left and right sides of the desk to adjust the front and rear position simultaneously.
Hook load	5 kgs (±0.5kg)
Desk load	20 kgs (±2kg)
Cushion	Foam vacuum forming
Backrest	Foam-forming artificial leather
Power generation indicator	Single green light bar
Moving wheels	Front mounted*2
Noise decibel	58dB (@30KPH, in a quiet room)
Power generation	Max. 75 watt/hour (Wh) @60RPM

Display Specifications:

Screen	2.4”TFT LCD
Information display	Calorie, Speed, Power Generation, Battery Level, Resistance Stage, Desk Height, Metric/Imperial Unit Switch
Bluetooth	Bluetooth 5.0

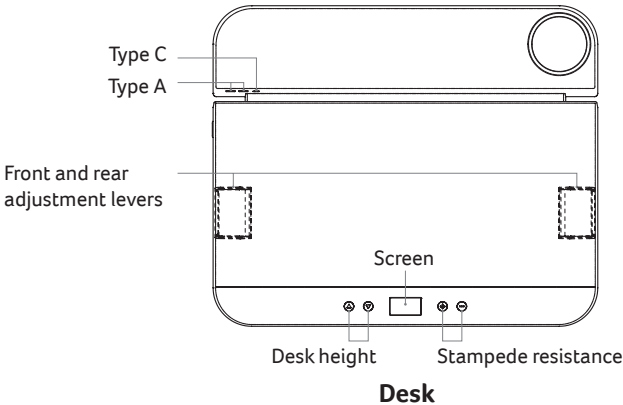

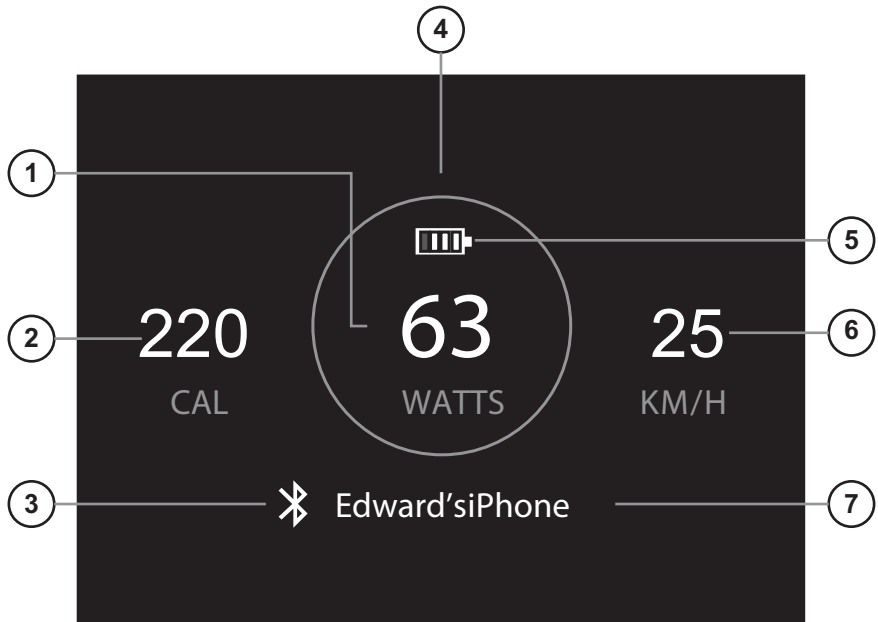

Stampede exercise screen



Display:

- ①: Power generation
- ②: Calories (calories burned in current exercise)
- ③: When Bluetooth is connected, the Bluetooth icon is always on.
- ④: Water ripple is illuminated during stampede powering.
- ⑤: 4-level battery indicator (25/50/75/100%)
- ⑥: Speed (Metric/KMH; Imperial/MPH)
- ⑦: The name of the connected phone

Display Navigation




Resistance adjustment screen

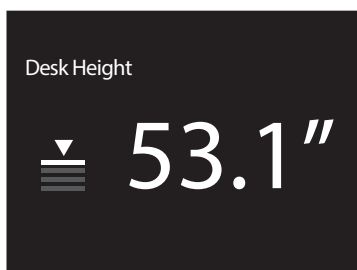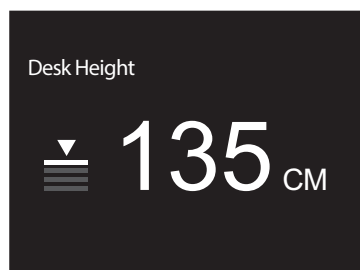

Desk height screen

Operating Instructions:

1. The product is designed with a built-in power-saving mode. When there's no stampede for more than 2 minutes, the screen will enter the power saving mode.
2. To activate it, there are two ways to wake the screen:
 - a. Press any key;
 - b. Start stampede.
3. Desk height adjustment: press and hold the "⬆" or "⬇" button on the desk to display the current height and height line icon.
4. Stampede resistance adjustment: Press the "⬆" or "⬇" button on the desk, and the icon blinks for 0.5 sec. After three flashes, the stampede resistance will be set to the current level.
5. Press the "⬆⬇" buttons on the desk simultaneously for three seconds and show the unit switch (Metric/Imperial) screen. Press "⬆" or "⬇" for the Metric/Imperial unit. Press "⬆" to confirm the selection.

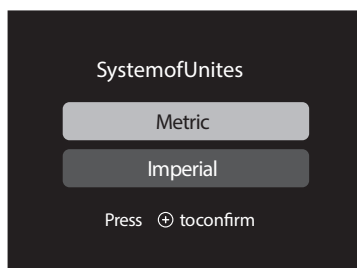

Maintenance

Do not attempt to service the product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.

- Liquid was spilled into the product.
- The product was exposed to rain or water.
- The product has been dropped, or the case has been damaged.
- The product exhibits a distinct change in performance, indicating a need for service.
- The product does not operate normally after following the operating instructions.

Battery information

- Do not attempt to replace the built-in rechargeable battery. The battery must be replaced by an authorized service center. Please follow the product instructions for charging the battery.
- If you plan to store the device for a long time, please keep it in a dry and well-ventilated place at room temperature (0°C - 35°C), with humidity between 45% and 80%. Avoid direct sunlight, high temperatures, and high humidity.
- Do not leave the product's battery completely discharged for an extended period; this may cause battery deformation or damage. We recommend checking and charging the battery to approximately 50% capacity every six months.



WARNING

- Batteries may explode if improperly handled. Do not disassemble or dispose of batteries in the fire.
- Do not short external contacts, crush, puncture, or otherwise tamper with batteries.



- Do not throw this electronic equipment into the trash when discarding. To minimize pollution and ensure the utmost protection of the global environment, please recycle properly. For more information on the Waste from Electrical and Electronics Equipment (WEEE) regulations, please visit www.acer-group.com/public/Sustainability

ABD330

eKinect Bike Desk / eKinect 酷騎桌 / eKinect Bike Desk 3



進口委製廠商：倚天酷暑股份有限公司

客戶服務專線：02-2790-4680

地址：汐止區新台五路一段112號24樓

Manufacturer: Acer Inc. 8F. 88, Sec.1 Xintai 5th Rd.,

New Taipei City, Taiwan

EU importer: Acer Italy s.r.l Viale delle Industrie 1/A,

20020 Arese (MI), Italy

UK importer: Acer UK Ltd Heathrow Boulevard III 282

Bath Road West Drayton Greater London UB7 0DQ

Version 1.0