

# Removing a Password

Perform the following to remove a password

NOTE: Below are the procedures for removing the supervisor password. The same procedures apply in removing the user and HDD passwords. When the supervisor password is removed, the user password is automatically removed.

1. Use the ↑ and ↓ keys to highlight the Change Supervisor Password parameter and press Enter. The Change Supervisor Password dialog box appears



Change Supervisor Password:

Enter Old Password: \_\_\_\_\_

Enter New Password: \_\_\_\_\_

Enter New Password Again: \_\_\_\_\_

[ SAVE ]

[ CANCEL ]

Move Item Select Cancel

**Figure 2-13. Change Supervisor Password**

2. Type the current password in the Enter Old Password field and press Enter
3. Press Enter twice without typing anything in the Enter New Password and Enter New Password Again fields. The Setup Notice dialog box appears



**Figure 2-14. Setup Notice**

4. Press Enter to complete the password setting. The computer sets the Supervisor Password Is parameter to Clear.
  5. Press F10 to save changes and exit BIOS Setup Utility.
-