


DUAL PROPANE INSTALL 2022 nuCamp T@B 320 CS-S

Dual tank hose connection kit: https://www.amazon.com/dp/B0C23R86YL?ref=ppx_yo2ov_dt_b_fed_asin_title

Propane Tank Cage to put in front bin: Bolts, washers, and lock nuts to secure cage inside bin. It turns out I had this on hand. I had removed it from my old T@B, and found it in my attic. It fit perfectly without any cutting. nuCamp does have a tank cage in their parts store. It does need to be welded or have holes drilled.

Piece of 1x2 PVC Trim

Step 1: Take out existing propane tank. (You can see the new/old tank frame I'm going to put in the tub. It's just sitting there.)

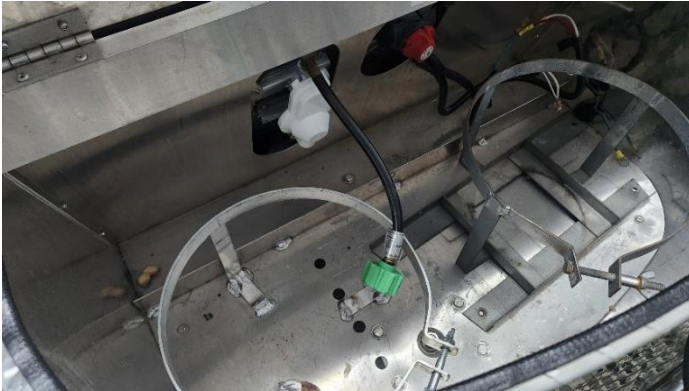

Step 2: Disconnect gas line from regulator



Step 3: Remove existing regulator



Step 4: The brackets from the old regulator were able to be removed and fit perfectly on the new regulator, and will use the same holes on the trailer. (I used the screws that came with the new regulator).



Old Regulator




New Regulator

Step 5: Remove the brass adapter from the bottom of the old regulator (I had to put the old regulator in a bench mounted vice to get the adapter to come off).



Step 6: Install the brass adapter into the new regulator. (Once again, I put the new regulator in the bench-mounted vice)

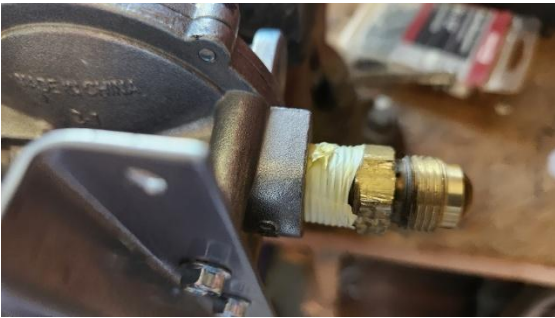

Step 7: I had to remove the main front bin and my small front bin. I just could not get enough leverage to mount the new regulator with the bin in place. Removing the bin means lowering the spare tire and setting it aside. Removing the bin is a 2-person job unless you have very long arms.



Step 8: Cut two pieces of PVC trim for spacers so that the two propane hoses clear the cutout in the front bin. (I used 1x2 PVC)



Step 8: Attach the new dual regulator back into the same spot on the trailer. Use butyl tape to prevent water intrusion into the trailer, then use long enough self-tapping screws to clear the spacers.



Step 9: Put the large bin back in place.



Step 10: Attach the propane line from the trailer to the new regulator. (If I had to do it over, I would have connected this back before putting the bin back in place. I had the hardest time getting it centered and on the threads to connect).



Step 11: Install the two propane pigtails that go to the tanks to the regulator.



Step 12: Bolt down or weld 2nd propane tank cage



Step 13: Put both propane tanks in and connect hoses.



Step 14: Test with stove and/or appliance on quick connect.

