
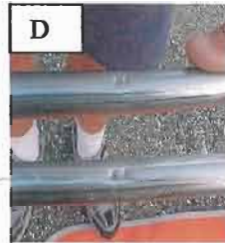


# T@B Awning Installation Guide

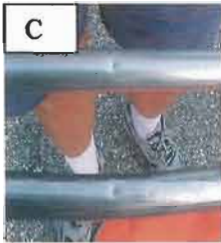

**Please read all instructions thoroughly & completely prior to installation, and always determine if weather conditions allow the installation & use of your T@B awning.**

**A).** Install awning skin welt into track on camper starting at rear of coach. Making sure the turnbuckles are facing the ground. Slide awning skin all the way to the front of the coach while assuring the awning welt goes into track from the rear of coach. On occasion you may need to add a silicone spray into track to ease the movement of the awning through the track.

**B).** Awning skin ready for hardware installation.

**C, D).** You have 5 "awning bow" pieces that are stamped with "pings", 1 thru 4 to determine which ends go to connect. Shown is an example of 1 & 2 pings. Align ends up to each other on the ground prior to assembling. Placing ends together matching the # of pings. Once you have created a layout of correct proportion to the coach you can insert pieces into each other by pushing button in & locking into place of the corresponding piece.

**E).** Piece #1, with 1 ping on one end & post on other end goes to the front of the coach; piece #5 with 4 pings on one end & post on other end goes to the rear of the coach. Keeping in mind the 2 pieces that have posts on the end of them go to the ground.

**F).** Unzip bow pocket along outer edge of awning. Install the 5 piece awning bow assembled into the bottom support pocket of awning at the rear of the coach, **(Dia. G)** then zip the awning bow pocket up enclosing the 5 piece awning bow, make sure to put piece #1 into the bottom support pocket at front of coach also.

**H).** You are now ready to install the 5 tension rafters. It is recommended that you start with the center. Make sure the black protector is on the end of the pole where the turnbuckle goes into.

**I).** Put C-clip over awning bow in the corresponding cutouts.

**J).** Put turnbuckle into slot & turn button to attach. Adjust tension according to necessity of each tension rafter.

**K).** Tension rafter properly installed in front side pocket.

**L).** Front side view of coach & awning.

**M).** Door side view.

Depending on terrain you may stake down the front & rear of your awning with the stakes provided. It is always recommended that in **High Winds** & or **Storms** that you take your awning down.

**YOU ARE NOW READY TO ENJOY YOUR T@B AWNING!**