



HORIZEX

25
YEARS
1987-2012
The Original Flyscreen Innovator

UCS Kit Assembly Instructions




Step 1

Place the packaged kit
on a flat working
surface such as a table




Step 2

Open the plastic
packages and discard
the plastic

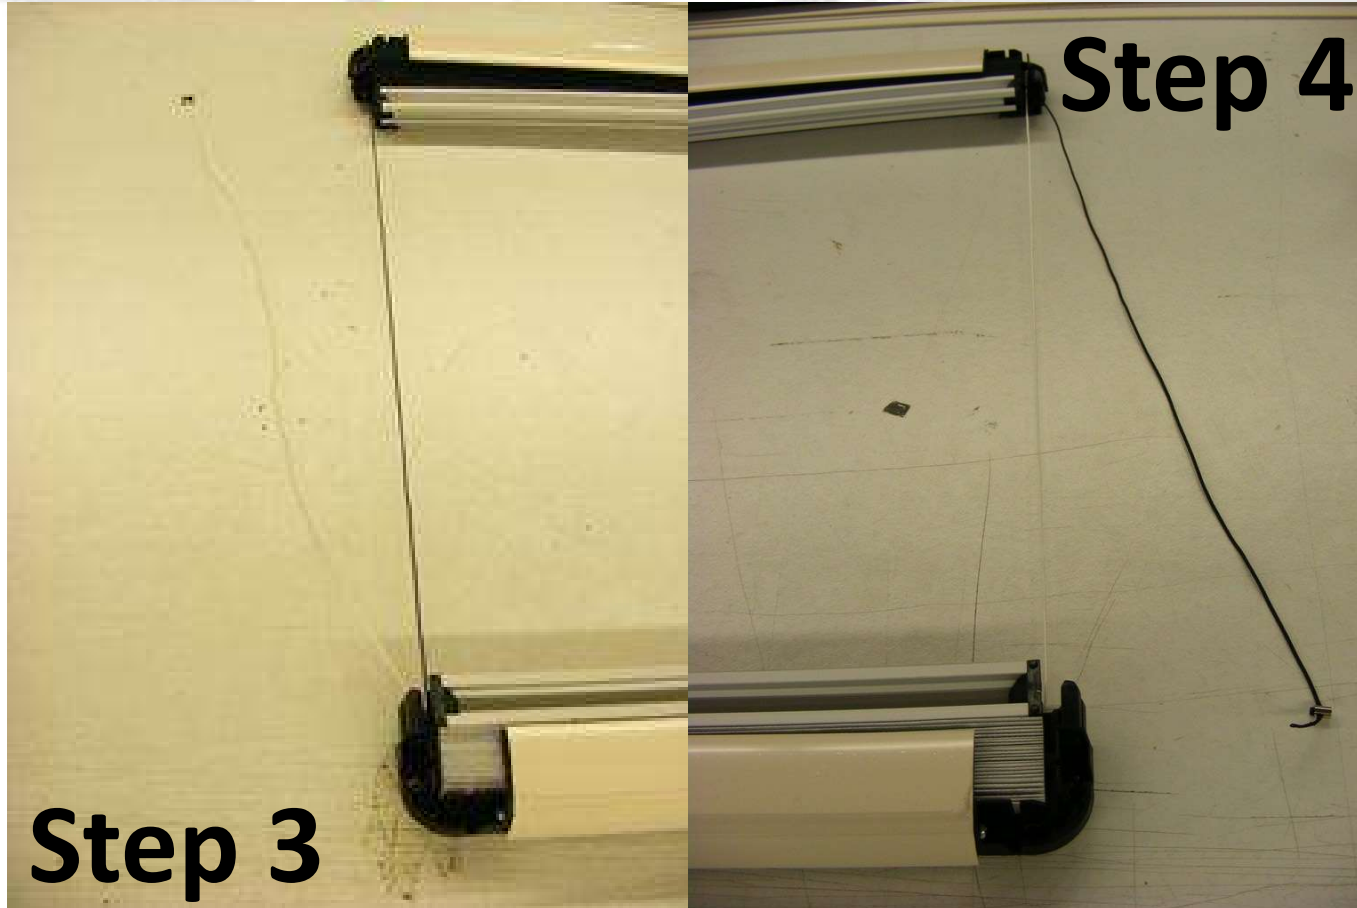


Extend the two
cassettes apart from
each other


Note that on one corner a
white cord is not yet fixed
and on the opposite corner
a black cord is not yet fixed

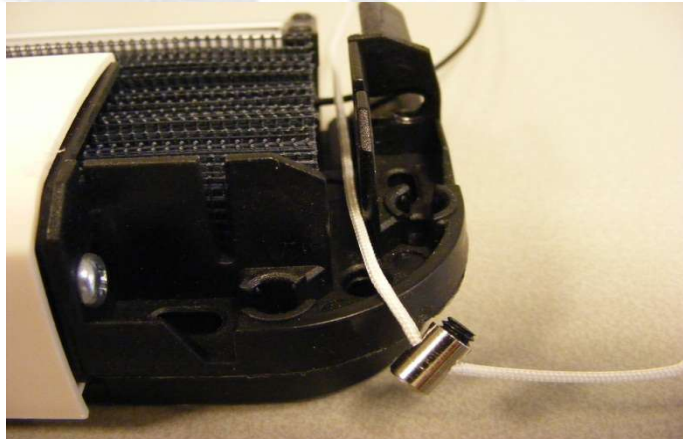

Step 5

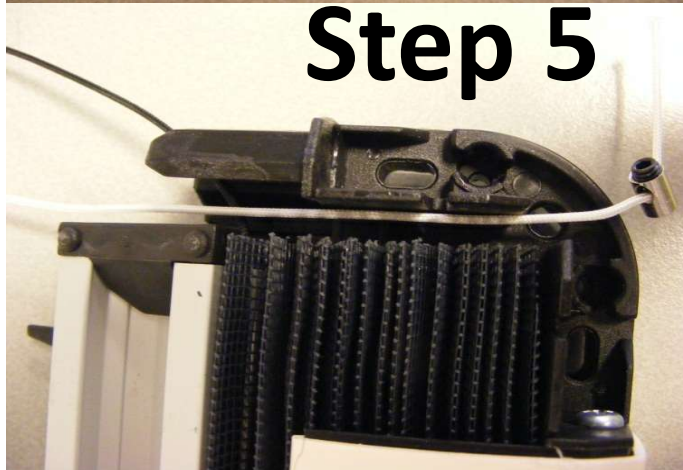


Route the free end of the cords through the channel as shown in the pictures above. Repeat this for both sides.

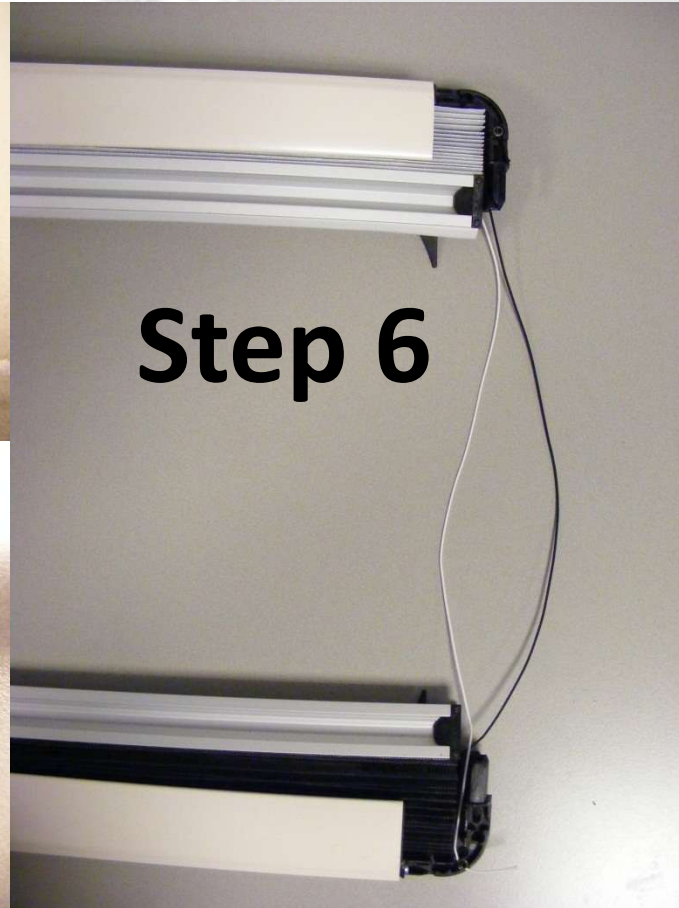

Step 6

Insure that the cords are not crossed or twisted. Repeat this for both sides.

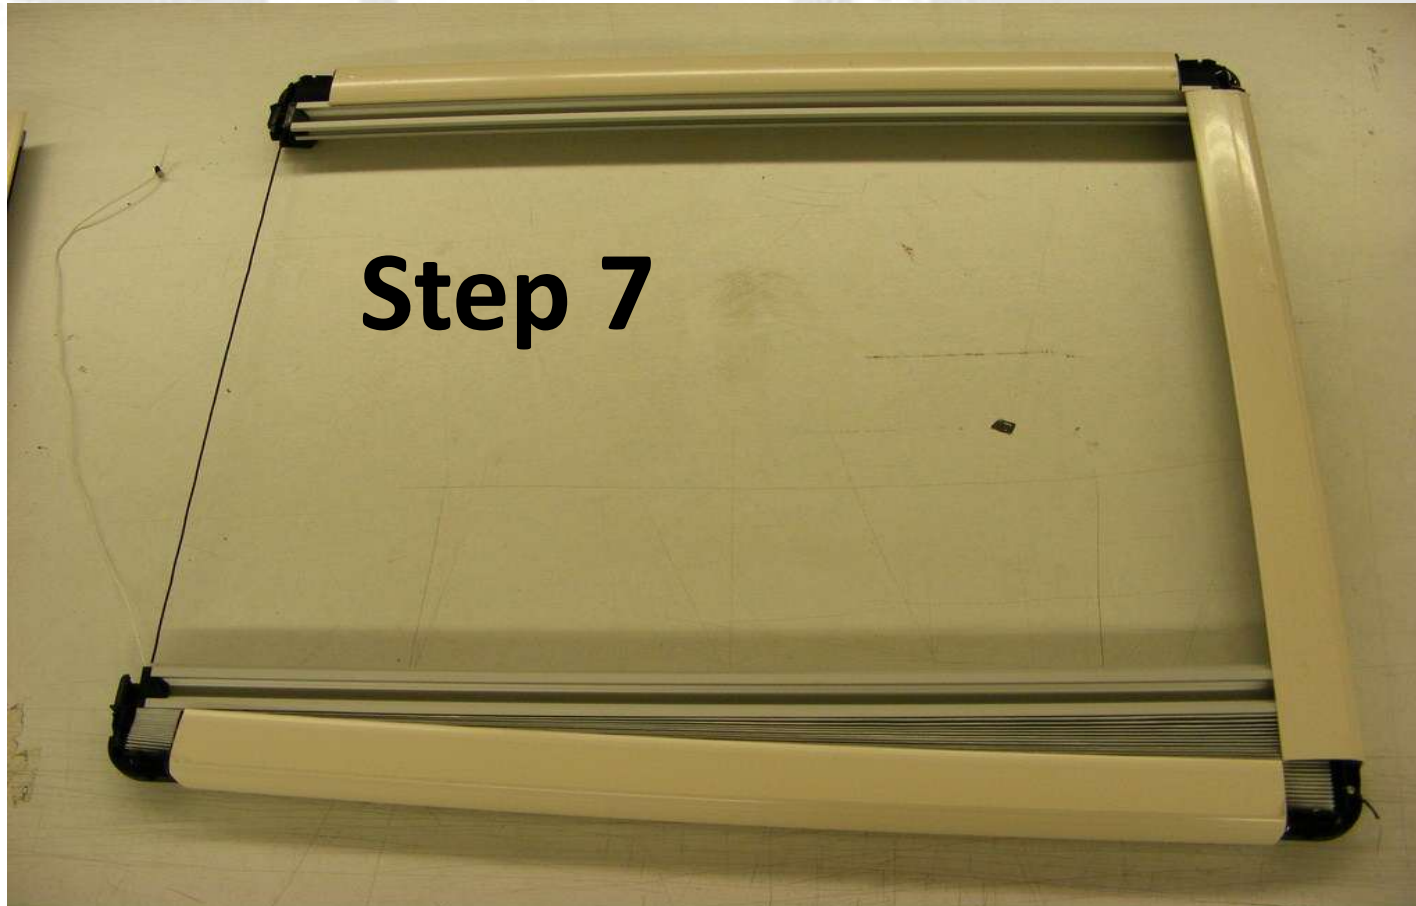

Step 7

Install the side profiles onto the corner pieces. Repeat this for both sides.



Step 8

Insert the cord tensioners into the pockets on the corner pieces. Repeat this for both sides



Step 9

Fasten the corner pieces to the side profiles using the screws provided in the hardware kit. Repeat this for all four corners.