

← Hot to house fixtures

← Tee out to HP
w/shut-off after T stub w/ flex
connector to HP

Ball valve
shut-off,
HW drained
below this
point →



cold supply to coil →

Existing PT valve, leave open
to vent cold line to coil
after draining

= Drained portions of coil
lines when HP in use

remove compression splice,
install ball valve
for cold supply shut-off, cold
water drained below this point

Hot out, install boiler drain, leave open for vent after draining
coil and pipe sections below new shut off valves

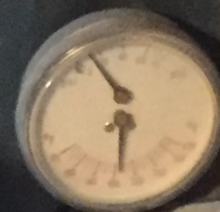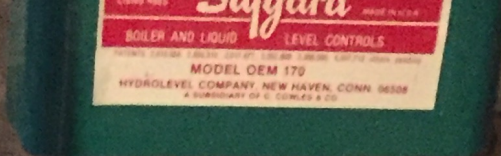

POT

COLD

E