

THE BASICS TO

Digitizing

1

Start Piece	Large Piece	Follow-on Piece	
Rule Table	Numeric Sizes	Alpha Size	Copy Piece

!	@	#	\$	%	^	&	()	-	+	=
-	<	>	:	;	"	'	/	?	.	,	
Q	W	E	R	T	Y	U	I	O	P		
A	S	D	F	G	H	J	K	L			
Z	X	C	V	B	N	M					
SPACE											

Internal Label	Attribute	
Alt Grain Line	90 Degree Angle	Circle, Ctr, RAD
Close Piece	Mirror Piece	End Input
Delete Piece	Delete to Last Point	


5

6

3

2

4

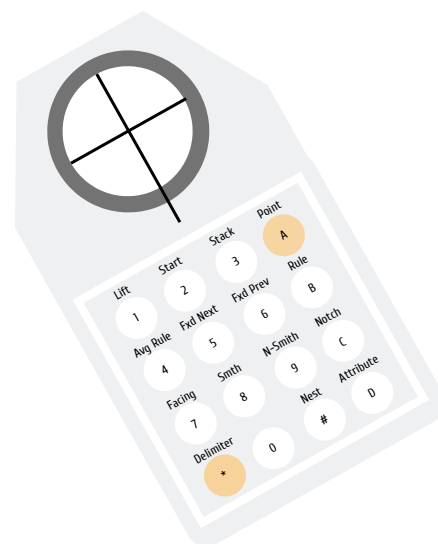

*All steps begin after opening W-Digit and filling in Digitizing Process Options on your computer

01

Start Piece

Place the digitizing cursor over 'Start Piece' in the digitizing menu and select 'Point' on the digitizing cursor.

02

**Digitize Grain Line
Point --> Point -->
Delimiter**

From left to right place cursor over the start and end of the Grain Line using 'Point' to select points. Once done, move cursor to an empty field and select the Delimiter *.

03

Digitize Perimeter

Start digitizing the piece at a straight closed line or the mirror line. Use 'Point' to start the perimeter.

04

Close or Mirror Piece

Once all points have been assigned, the last one should be a straight line from the first start point. After last point is placed chose to 'Close Piece' or 'Mirror Piece' and selecting with 'Point'.

05

**Internals
Point --> Point -->
Delimiter ***

After piece is closed you can add 2 point internal lines. Internal Line labels can be assigned by selecting the menu option. Once done entering all internal lines, you can select delimiter*.

06

End Input

After completing all perimeter lines and internals, place the cursor over 'End Input' and select using 'Point'.